


Step 8


1. Start up the aircraft.
2. Take care that the "PFD" is in the GPS mode by activating the "CDI" knob .
3. Taxi to the runway and Take Off



Step 9

1. At a safe altitude.
2. Fly the aircraft, by hand, in the direction of the desired GPS route.
3. Activate the AutoPilot (knob "AP").
4. Activate NAV by selecting the "NAV" knob.
On the "PFD" the GPS indication will stay "grjjs".
5. Activate the "ALT" knob to secure your present flight altitude.

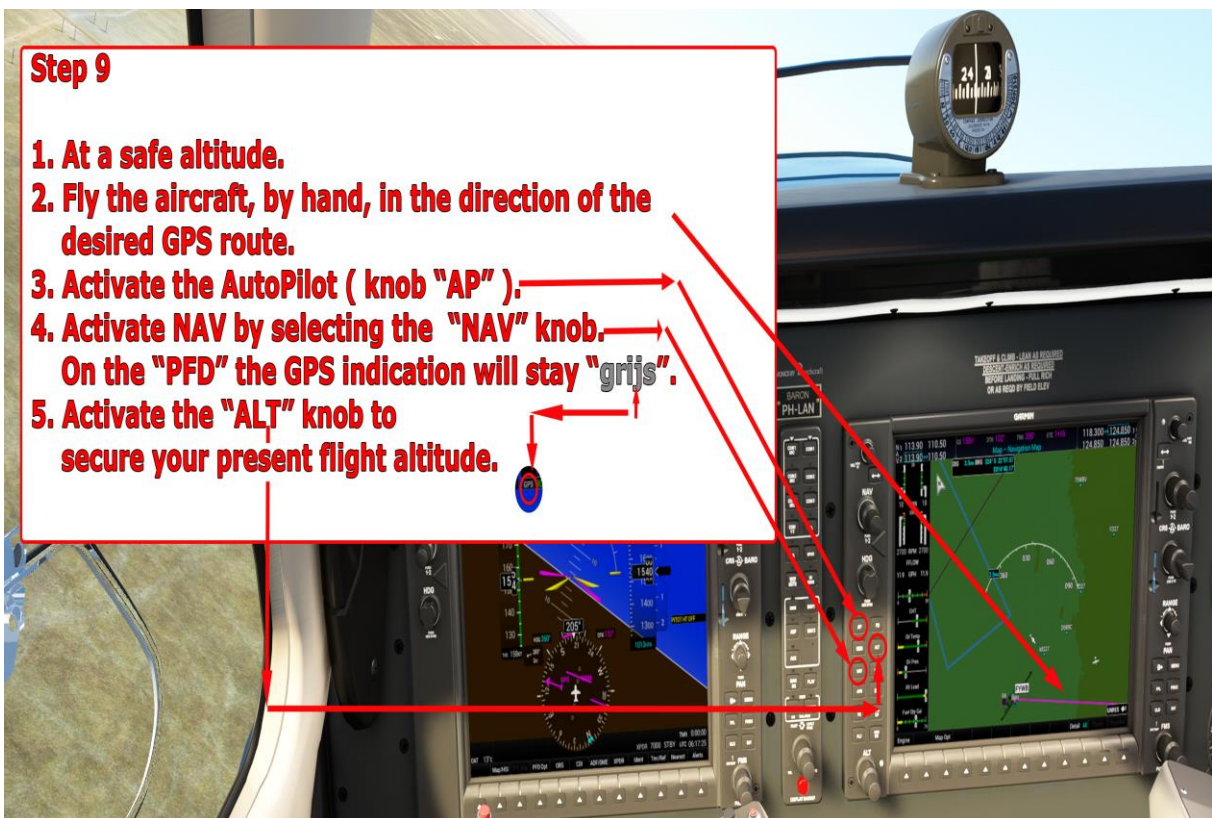

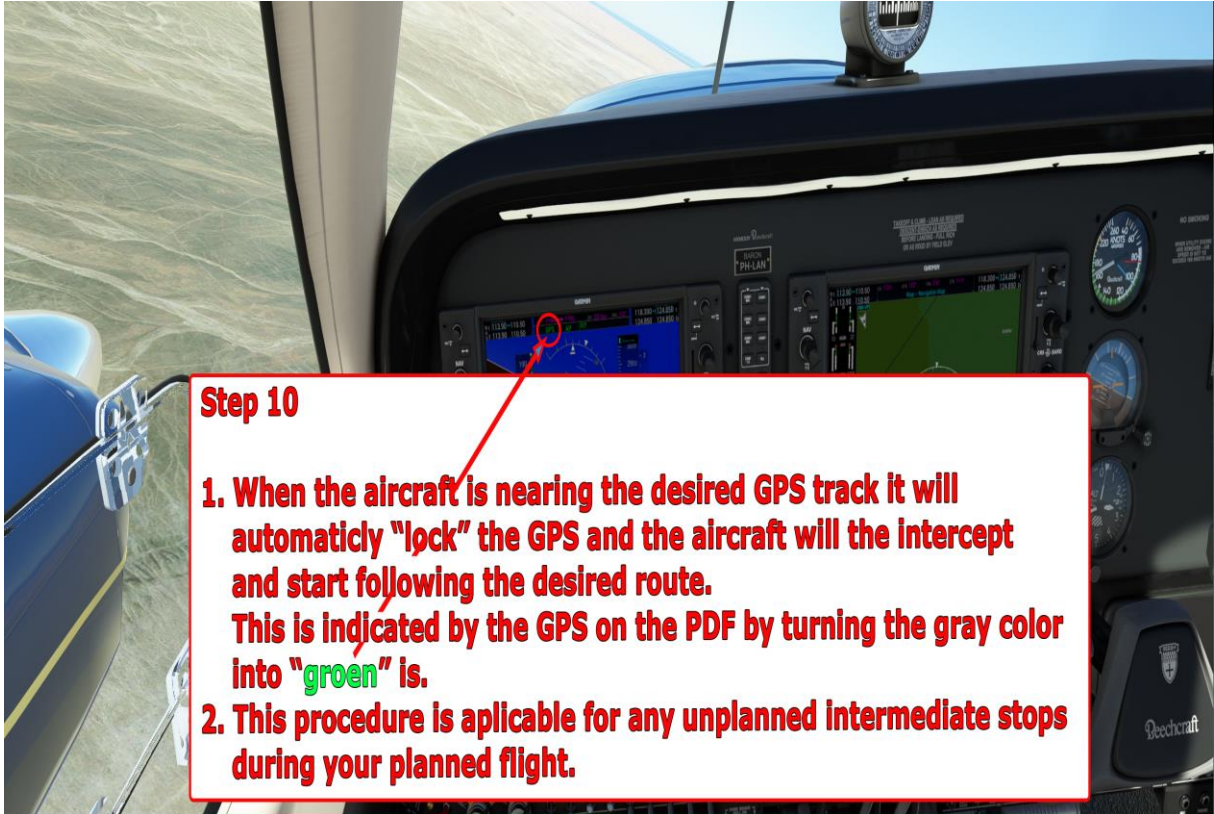

Step 10

- 1. When the aircraft is nearing the desired GPS track it will automatically "lock" the GPS and the aircraft will intercept and start following the desired route. This is indicated by the GPS on the PDF by turning the gray color into "groen" is.**
- 2. This procedure is applicable for any unplanned intermediate stops during your planned flight.**